




- | | | | | | |
|---|--|--|---|--|--|
| 1 | 2 | 3 | 4 | 5 | 6 |
| Information Brochure
Choose controls to match application | Application Brochure
Design your mechanical applications | Rough-in Wiring
Rough-in wiring instructions | Wiring Brochure
Wiring and installation of specific control | Data Brochure
Control settings and sequence of operation | Job Record
Record settings & wiring details for future reference |

Introduction

The Zone Expansion Manager 326 is designed to simplify the wiring between tN4 thermostats and zone pumps. The 326 supplies power to the tekmarNet®4 (tN4) thermostats and connected zone pumps.

Features:

- tN4 Compatible
- Three Powered Thermostat Connections
- Three Powered Zone Pump Outputs
- Powered Zone Group Pump Output
- Simple Wiring
- CSA C US Certified for use in USA and Canada

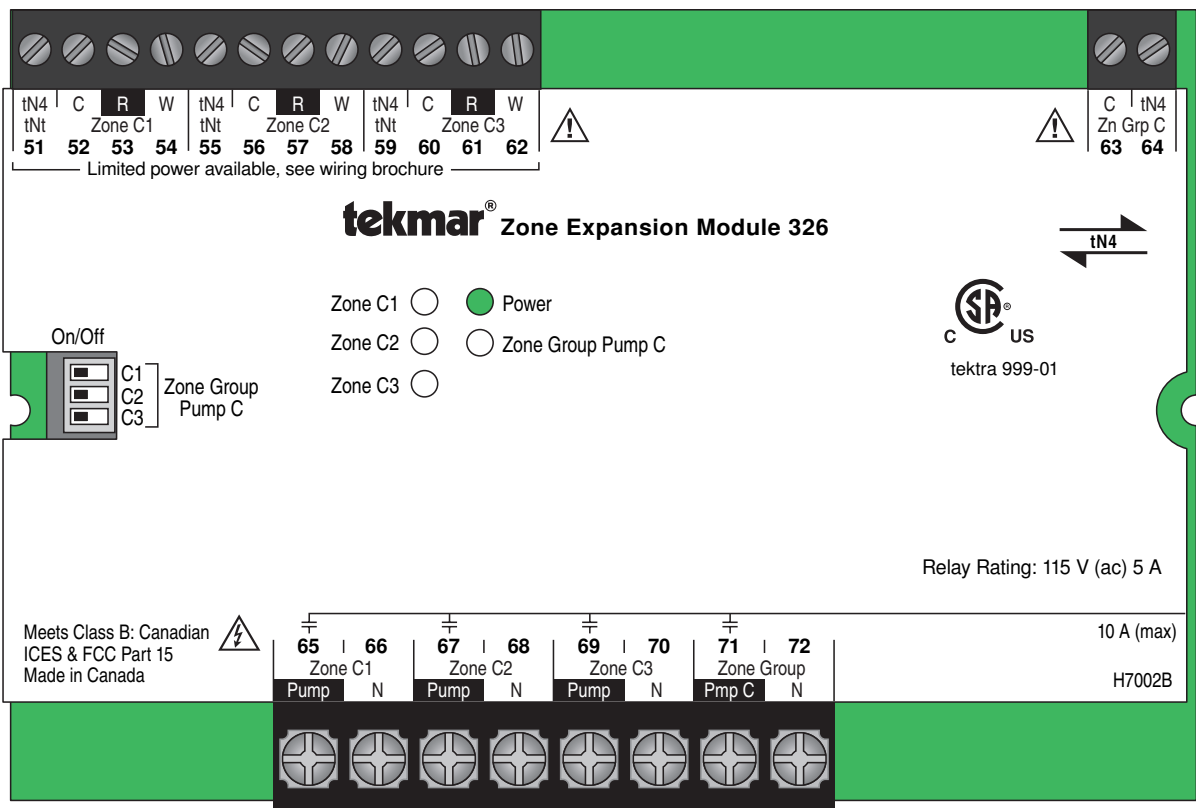

Sequence of Operation

24 V (ac) Powered Outputs

The 326 provides powered outputs for up to three 24 V (ac) thermostats.

The 326 has limited power available. Refer to the Job Records to determine the allowable load. If the load is too large, refer to the Wiring Brochure to add additional power to the system.

115 V (ac) Powered Outputs


The 326 has an internal relay that provides a powered output for a zone group pump.

Refer to the Job Records to determine the allowable loads for this relay.

Sequence of Operation


When a thermostat calls for heat, the Zone LED turns on and the Zone relay is turned on.

- If the Zone Group Pump DIP switch is set to On, the Zone Group Pump LED and relay turn on.
- If the Zone Group Pump DIP switch is set to Off, the Zone Group Pump LED and relay are not turned on.

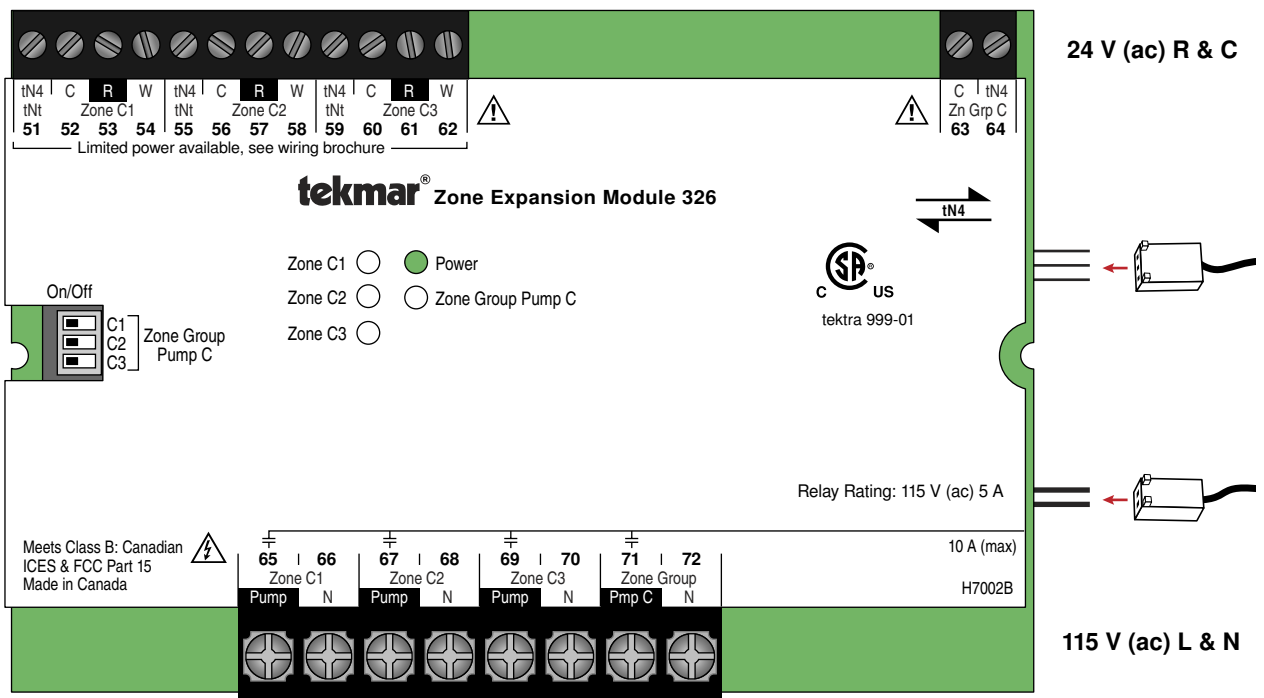

DIP Switches

DIP Switch Settings

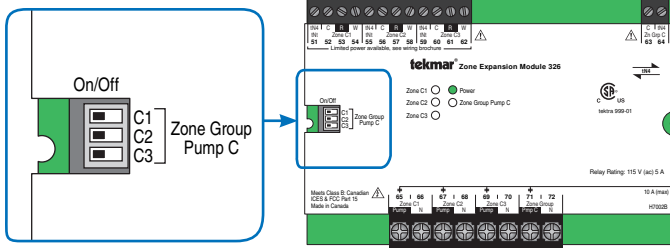

The DIP switches are found on the left hand side of the 326.

Zone Group Pump

Each zone has a corresponding Zone Group Pump DIP switch.

Zone Group Pump DIP switch set to On:

- The Zone Group Pump turns on when the zone calls for heat.

Zone Group Pump DIP switch set to Off:

- The Zone Group Pump does not turn on when the zone calls for heat.

LED Status Indicators

Power LED

Green:

- Normal operation.

Off:

- No power to the Zone Expansion Module.

Zone LEDs

Green:

- The zone is on.

Off:

- The zone is off.

Zone Group Pump LED


Green:

- The Zone Group Pump relay is on.

Off:

- The Zone Group Pump relay is off.

Zone Expansion Module 326

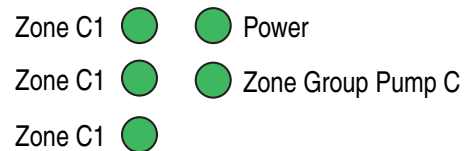

Five LEDs to provide the status of the 326's outputs.

Cleaning the Control

The control's exterior can be cleaned using a damp cloth. Moisten the cloth with water and wring out prior to wiping the control. Do not use solvents or cleaning solutions.

Limited Warranty and Product Return Procedure

Limited Warranty *The liability of tekmar under this warranty is limited. The Purchaser, by taking receipt of any tekmar product ("Product"), acknowledges the terms of the Limited Warranty in effect at the time of such Product sale and acknowledges that it has read and understands same.*

The tekmar Limited Warranty to the Purchaser on the Products sold hereunder is a manufacturer's pass-through warranty which the Purchaser is authorized to pass through to its customers. Under the Limited Warranty, each tekmar Product is warranted against defects in workmanship and materials if the Product is installed and used in compliance with tekmar's instructions, ordinary wear and tear excepted. The pass-through warranty period is for a period of twenty-four (24) months from the production date if the Product is not installed during that period, or twelve (12) months from the documented date of installation if installed within twenty-four (24) months from the production date.

The liability of tekmar under the Limited Warranty shall be limited to, at tekmar's sole discretion: the cost of parts and labor provided by tekmar to repair defects in materials and/or workmanship of the defective product; or to the exchange of the defective product for a warranty replacement product; or to the granting of credit limited to the original cost of the defective product, and such repair, exchange or credit shall be the sole remedy available from tekmar, and, without limiting the foregoing in any way, tekmar is not responsible, in contract, tort or strict product liability, for any other losses, costs, expenses, inconveniences, or damages, whether direct, indirect, special, secondary, incidental or consequential, arising from ownership or use of the product, or from defects in workmanship or materials, including any liability for fundamental breach of contract.

The pass-through Limited Warranty applies only to those defective Products returned to tekmar during the warranty period. This Limited Warranty does not cover the cost of the parts or labor to remove or transport the defective Product, or to reinstall the repaired or replacement Product, all such costs and expenses being subject to Purchaser's agreement and warranty with its customers.

Any representations or warranties about the Products made by Purchaser to its customers which are different from or in excess of the tekmar Limited Warranty are the Purchaser's sole responsibility and obligation. Purchaser shall indemnify and hold tekmar harmless from and against any and all claims, liabilities and damages of any kind or nature which arise out of or are related to any such representations or warranties by Purchaser to its customers.

The pass-through Limited Warranty does not apply if the returned Product has been damaged by negligence by persons other than tekmar, accident, fire, Act of God, abuse or misuse; or has been damaged by modifications, alterations or attachments made subsequent to purchase which have not been authorized by tekmar; or if the Product was not installed in compliance with tekmar's instructions and/or the local codes and ordinances; or if due to defective installation of the Product; or if the Product was not used in compliance with tekmar's instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, WHICH THE GOVERNING LAW ALLOWS PARTIES TO CONTRACTUALLY EXCLUDE, INCLUDING, WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, DURABILITY OR DESCRIPTION OF THE PRODUCT, ITS NON-INFRINGEMENT OF ANY RELEVANT PATENTS OR TRADEMARKS, AND ITS COMPLIANCE WITH OR NON-VIOLATION OF ANY APPLICABLE ENVIRONMENTAL, HEALTH OR SAFETY LEGISLATION; THE TERM OF ANY OTHER WARRANTY NOT HEREBY CONTRACTUALLY EXCLUDED IS LIMITED SUCH THAT IT SHALL NOT EXTEND BEYOND TWENTY-FOUR (24) MONTHS FROM THE PRODUCTION DATE, TO THE EXTENT THAT SUCH LIMITATION IS ALLOWED BY THE GOVERNING LAW.

Product Warranty Return Procedure All Products that are believed to have defects in workmanship or materials must be returned, together with a written description of the defect, to the tekmar Representative assigned to the territory in which such Product is located. If tekmar receives an inquiry from someone other than a tekmar Representative, including an inquiry from Purchaser (if not a tekmar Representative) or Purchaser's customers, regarding a potential warranty claim, tekmar's sole obligation shall be to provide the address and other contact information regarding the appropriate Representative.



tekmar Control Systems Ltd., Canada
tekmar Control Systems, Inc., U.S.A.
Head Office: 5100 Silver Star Road
Vernon, B.C. Canada V1B 3K4
(250) 545-7749 Fax. (250) 545-0650
Web Site: www.tekmarcontrols.com

